

Cleaning The Spring Valve

The one way spring valve is a one way valve to stop water travelling back the way it came.

(Check flow directional arrows on middle of spring valve prior to removing valve and note down orientation)

1. Close surrounding ball/gate valves to stop the water leaking
2. The valve has two unions either end which unscrew to release the spring valve centre
3. Now you have removed the centre piece you can start cleaning out the spring and removing the hair, forceps are useful at this point
4. There are three of these valves on your equipment which need to be checked and clean regularly
(See Water Walker v3 – Fully Pumped Plant Pack for locations)
5. Once you're happy its clean you can now put it back together. Please ensure you have put it in the right way and the flow directional arrows are positioned in the same direction as before cleaning

