

How to remove an Airlock

Cause

An Airlock occurs when large pockets of air get stuck in your pump and reduce flow.

If your equipment is experiencing circulation issues (pump is turning on but there is no flow) this may be the case.

Resolution:

1. Turn off your Pump
2. Loosen the top of the pump lid (circled in yellow) to allow air to come out (**note that the valves should all be in the open position**)
3. Once pump basket is full of water (and no more air) re-tighten the pump lid.
4. Turn pump on and check your system